
 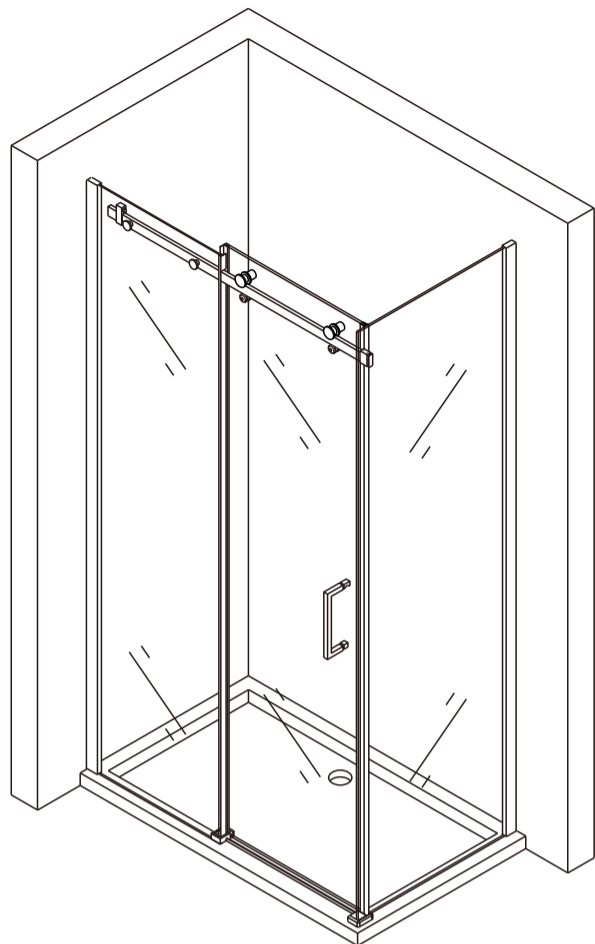





INSTALLATION MANUAL

TOOL PICTURE

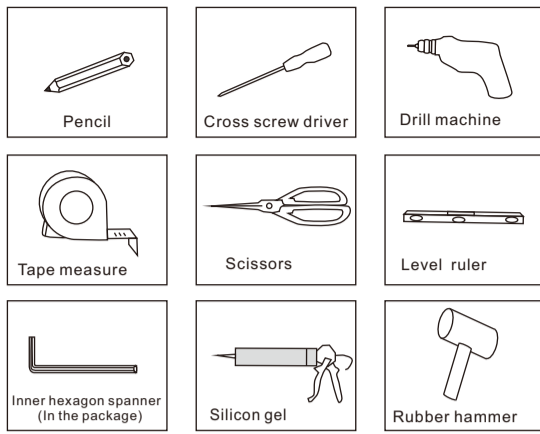

ATL-802N







Accessory list

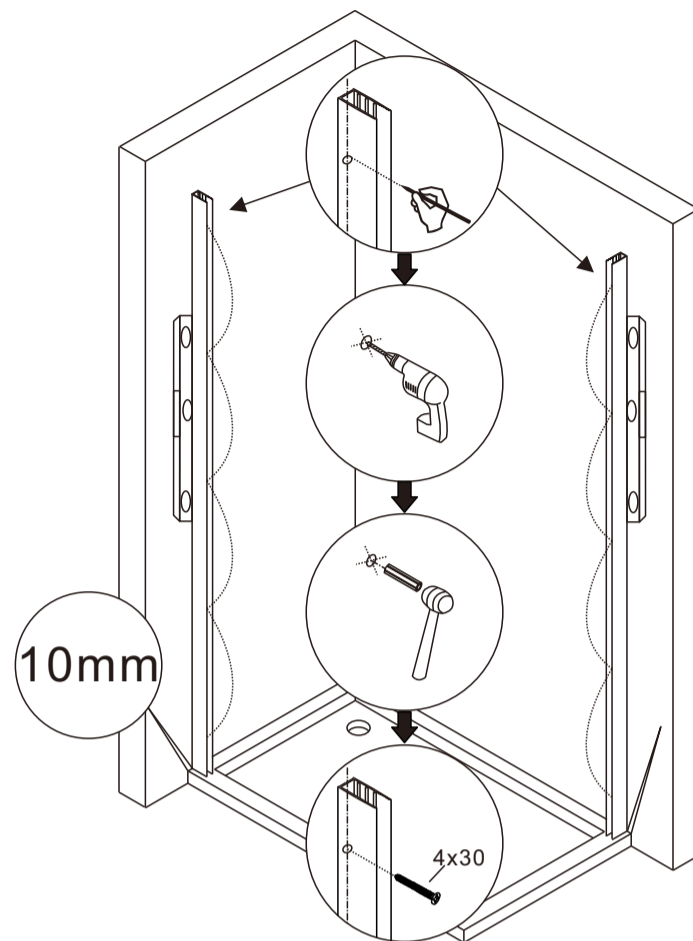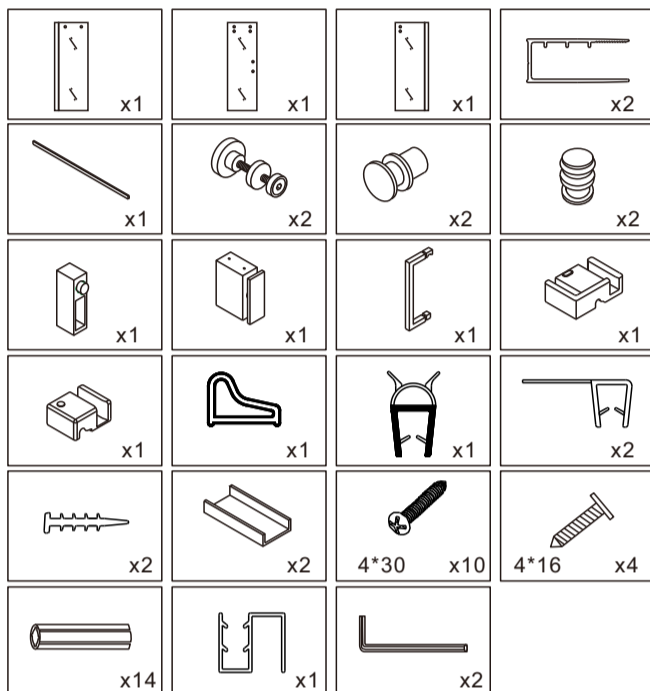

1

2

 
 
 
3

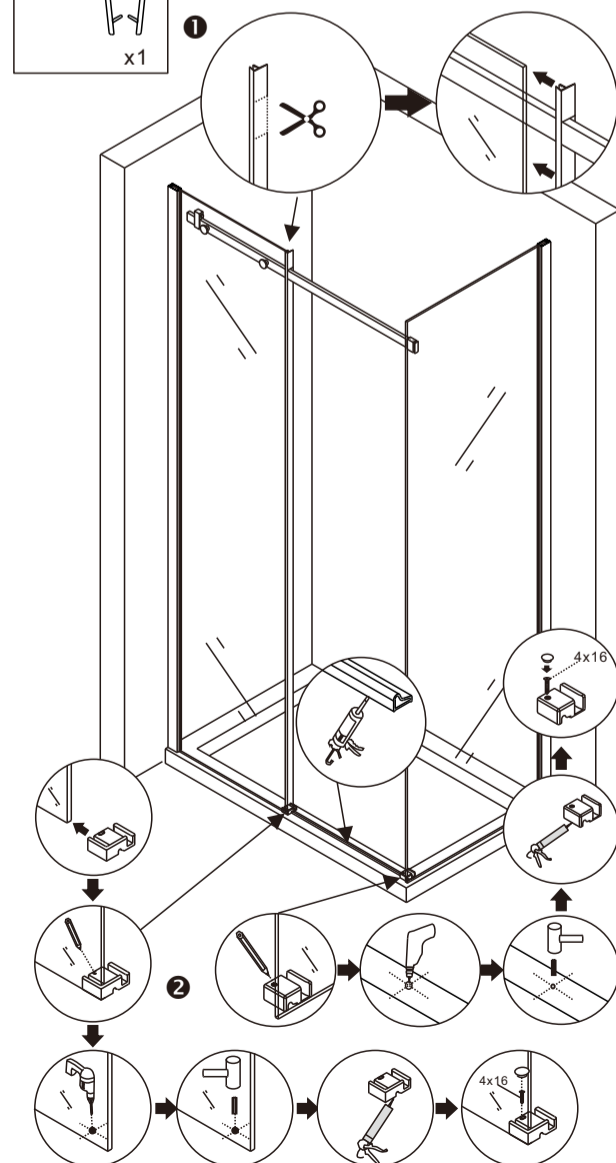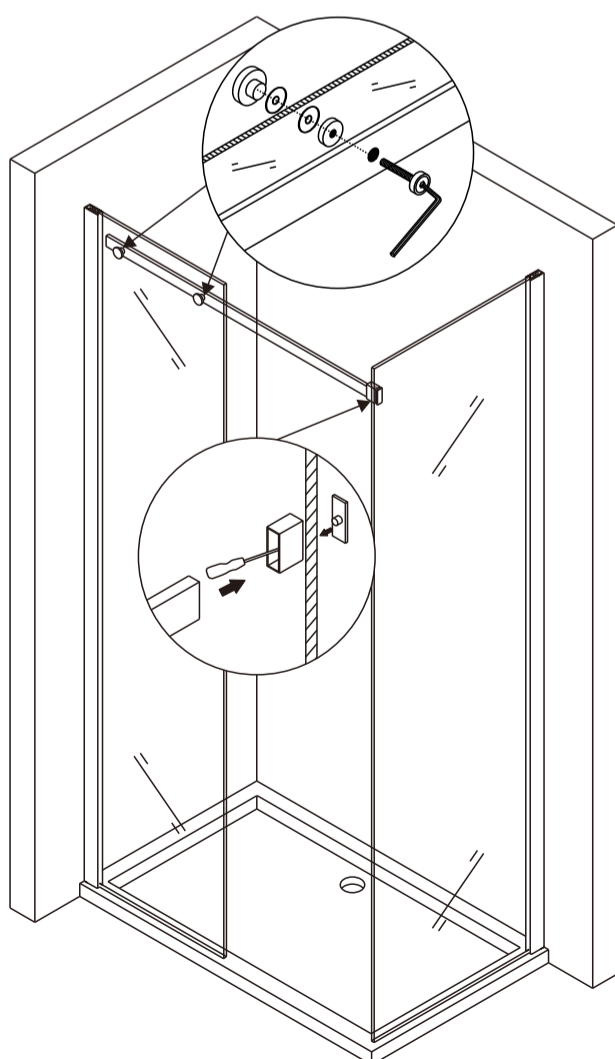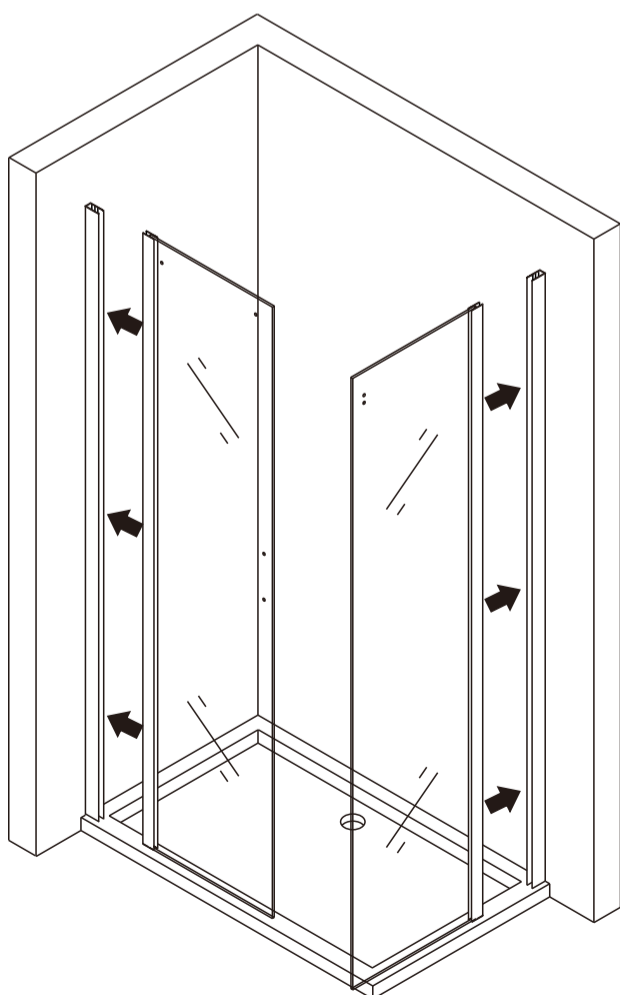


4

5

  
6

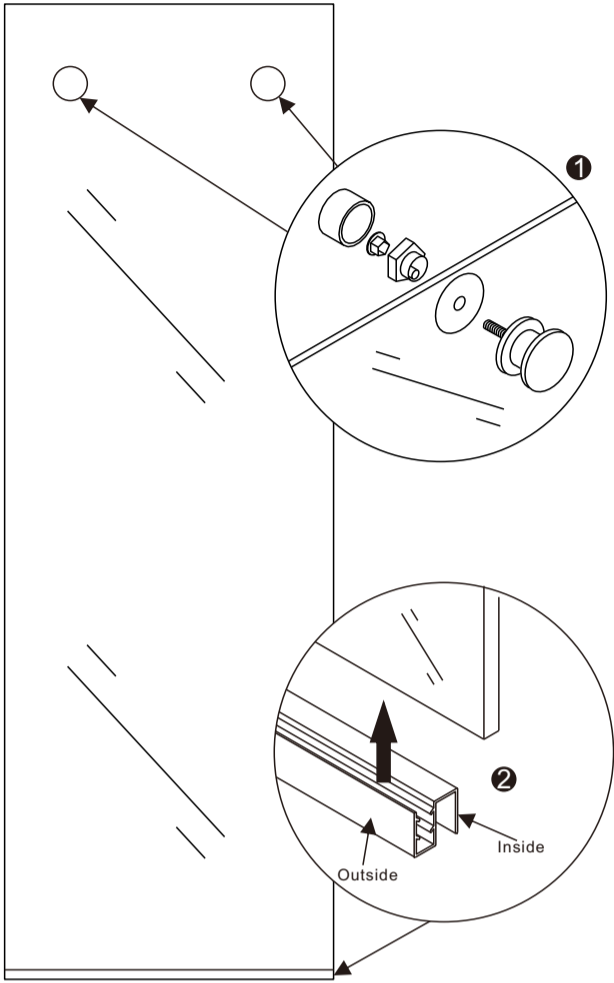



7

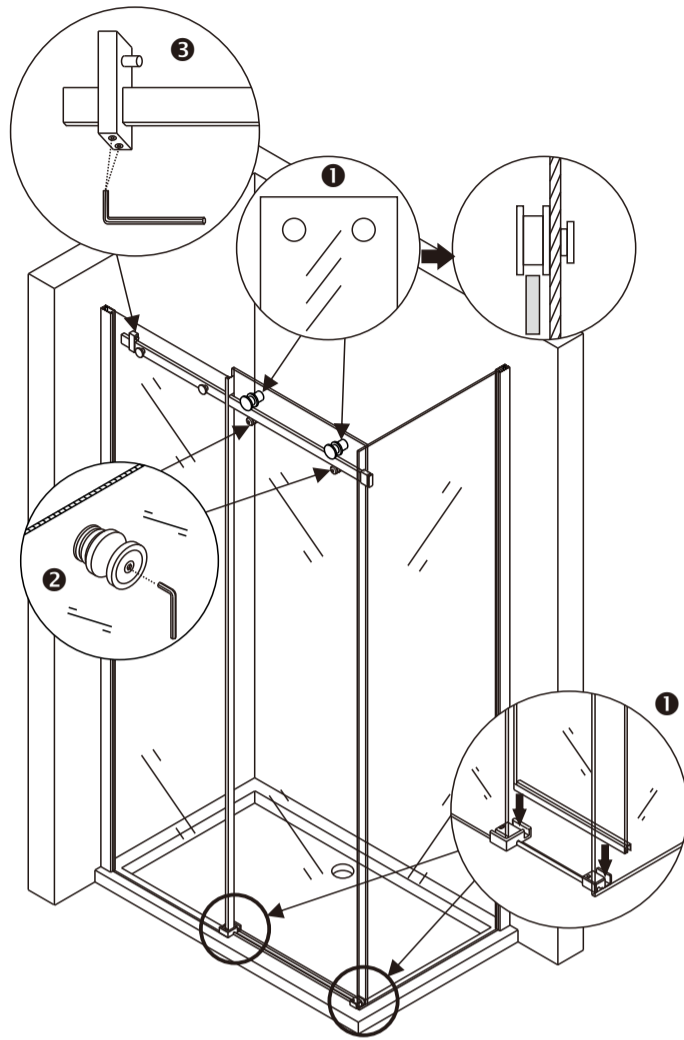

8

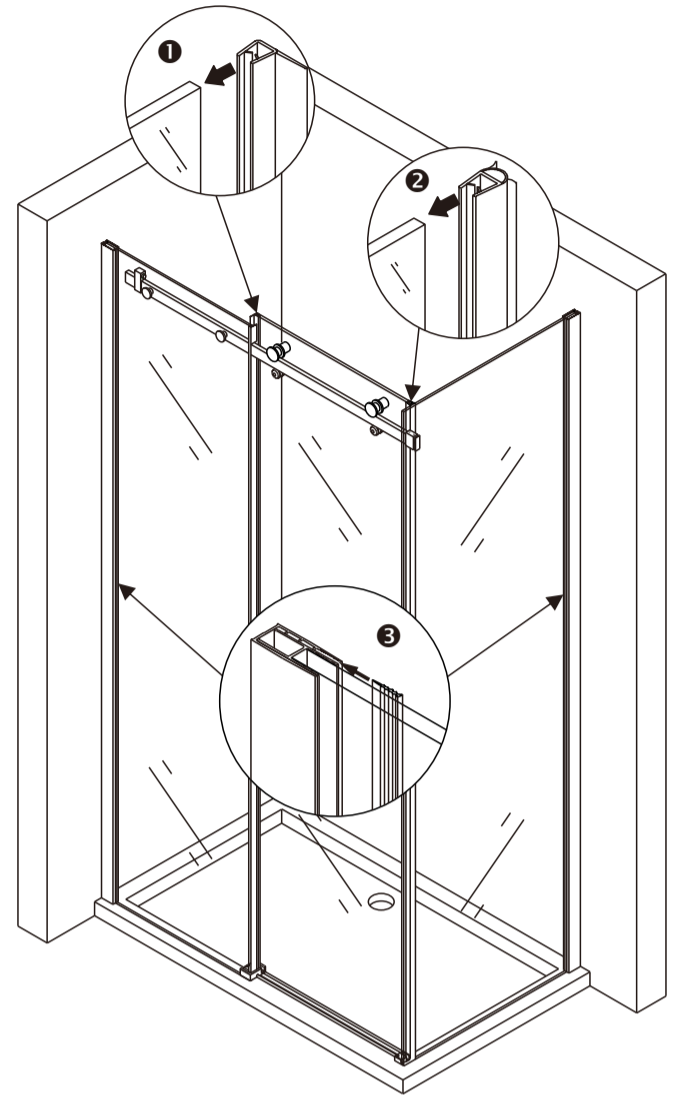

9

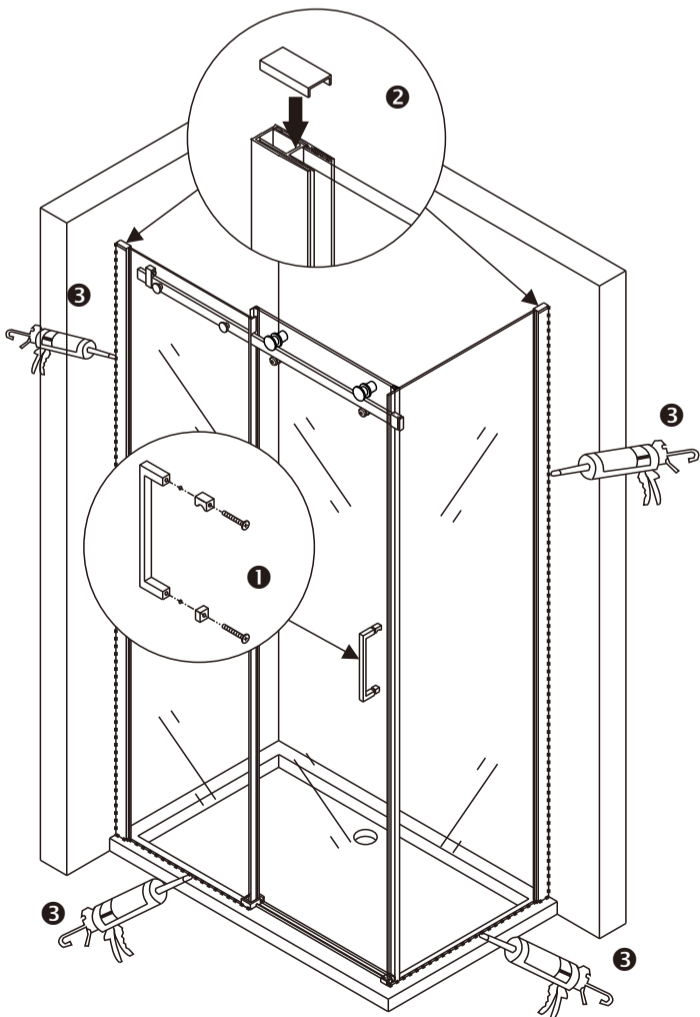 

10

11

12